QTC4 Series



Features

- All-purpose surface-mount crystal
- Four pad land pattern compatible with common plastic molded designs

Applications

- Computers, modems and communications
- Clock applications
- Microprocessors




General Specification	ons		
Frequency Range		3.200 to 70.000MHz	
Mode of Oscillation	Fundamental	3.200 to 32.768MHz	
	Third Overtone	24.576 to 70.000MHz	
Frenquency Tolerance at 25°C		±10 to ±30ppm (±30ppm standard)	
Frequency Stability over Tempe	rature Range	See Stability vs. Temperatur Table	
Storage Temperature		-55 to +125°C	
Aging per Year		±3ppm max.	
Load Capacticance C _L		10 to 32pF and Series Resonance	
Shunt Capacticance C ₀		7.0pF	
Equivalent Series Resistance (ESR)		See ESR Table	
Drive Level		1.0mW max.	
Insulation Resistance (MΩ)		500 at 100Vdc ±15Vdc	


Equivalent Series Resistance (ESR)					
Frequen	cy Range - MHz	Ω max.	Mode of Operation		
3.200	to 3.500	300	Fundamental		
3.510	to 3.999	200			
4.000	to 5.999	120			
6.000	to 7.999	80			
8.000	to 9.999	60	9 1 1 1		
10.000	to 15.999	50			
16.000	to 32.768	40	1 1 1 1		
24.576	to 70.000	80	Fundamental - Third Overtone		

custom values available upon reques

Frequency Stability vs. Temperature					
Operating Temperature	±10ppm	±20ppm	±30ppm	±50ppm	±100ppm
-20 to +70°C	0	0	0	0	0
-40 to +85°C	-	0	0	•	0
				• :	standard O available

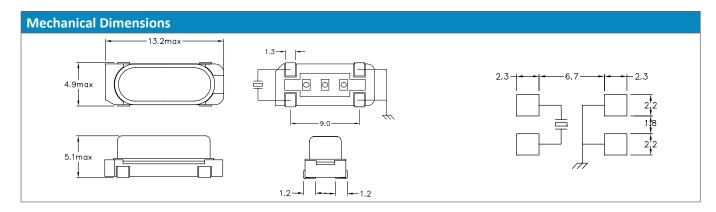

Quarz- technik Code	Package	Nominal Frequency (in MHz)	Vibration Mode	Load Capa- citance	Frequency Tolerance	Operating Temperature Range	Frequency Stability	Automotive Indicator	Packaging
QT = Quarz- technik	C4 = HC-49/U-S SMD 4-Pad	7 digits including the decimal point (f.ie. 12.0000)	F = AT-Fund	S = Series A = 8pF B = 12pF C = 16pF D = 18pF E = 20 pF	T1 = ±10ppm T2 = ±20ppm T3 = ±30ppm T5 = ±50ppm T0 = ±100ppm	C = -20 - +70°C I = -40 - +85°C	10 = ±10ppm 15 = ±15ppm 20 = ±20ppm 30 = ±30ppm 50 = ±50ppm 00 = ±100ppm	not available	M = 250pcs Tape&Reel R = 1000pcs Tape&Reel B = Bulk

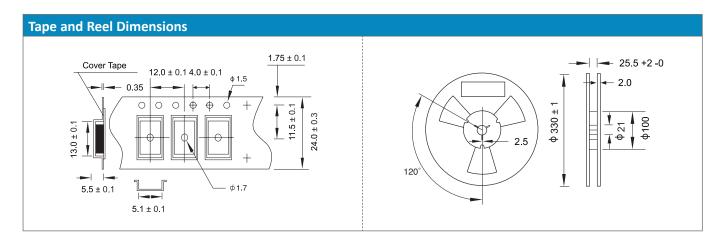

Marking Code Guide


Contains frequency, Quarztechnik manufacturing code, production code (month and year) and load capacitance.

Month Codes				
January	А	July	G	
February	В	August	Н	
March	С	September	I	
April	D	October	J	
May	E	November	К	
June	F	December	L	

Year	Codes				
2010	0	2011	1	2012	2
2013	3	2014	4	2015	5
2016	6	2017	7	2018	8
2019	9	2020	0	2021	1

Load C	Load Capacitance Code in pF				
pF	PN Code	pF	PN Code		
12	Α	20	F		
18	В	22	G		
8	С	30	Н		
10	D	32	I		
16	E	S	S		

Example: First Line: 12.000 (Frequency) Second Line: QA4A (Quarztechnik - January - 2014 - 12 pF)

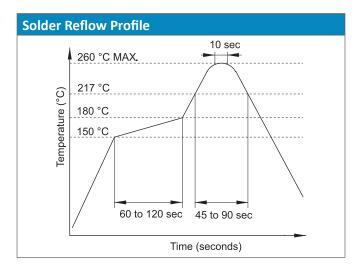

Environmental Specifications		
Mechanical Shock	MIL-STD-202, Method 213, C	
Vibration	MIL-STD-202, Method 201 & 204	
Thermal Cycle	MIL-STD, Method 1010, B	
Gross Leak	MIL-STD-202, Method 112	
Fine Leak	MIL-STD-202, Method 112	