

Features

- Low in height, suitable for thin equipment
- Ceramic package and metal lid assures high reliability
- Tight tolerance and stability available

Applications


- High density applications
- Modem, communication and test equipment
- PMCIA, wireless applications

General Specifications				
Frequency Range	12.000 to 52.000MHz			
Mode of Oscillation Fundamental	12.000 to 52.000MHz			
Frenquency Tolerance at 25°C	±10 to ±30ppm (±30ppm standard)			
Frequency Stability over Temperature Range	See Stability vs. Temperature Table			
Storage Temperature	-55 to +125°C			
Aging per Year	±3ppm max.			
Load Capacitance C _L	10 to 32pF and Series Resonance			
Shunt Capacitance C ₀	5.0pF max.			
Equivalent Series Resistance (ESR)	See ESR Table			
Drive Level	100μW max.			
Insulation Resistance (MΩ)	500 at 100Vdc ±15Vdc			


Equivalent Series Resistance (ESR)					
Frequency Range - MHz	Ω max.	Mode of Operation			
12.000 to 15.000	80	Fundamental			
15.100 to 20.000	60				
20.100 to 30.000	40				
30.100 to 52.000	30				

ustom values available upon reques

Frequency Stability vs. Temperature					
Operating Temperature	±10ppm	±20ppm	±30ppm	±50ppm	±100ppm
-20 to +70°C	0	0	0	0	0
-40 to +85°C	O*	0	•	0	0
*Operating Temperature -30 to +85°C				• :	standard O available

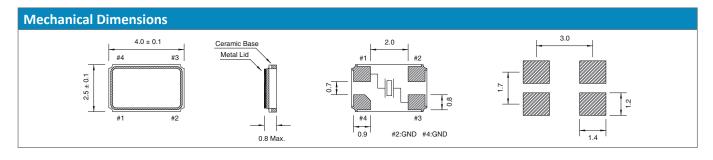

Quarz- technik Code	Package	Nominal Frequency (in MHz)	Vibration Mode	Load Capa- citance	Frequency Tolerance	Operating Temperature Range	Frequency Stability	Automotive Indicator	Packaging
QT = Quarz- technik	C4A = 2.5x4 4-Pad SMD	7 digits including the decimal point (f.ie. 12.0000)	F = AT-Fund	S = Series A = 8pF B = 12pF C = 16pF D = 18pF E = 20 pF	T1 = ±10ppm T2 = ±20ppm T3 = ±30ppm T5 = ±50ppm T0 = ±100ppm	C = -20 - +70°C I = -40 - +85°C	10 = ±10ppm 15 = ±15ppm 20 = ±20ppm 30 = ±30ppm 50 = ±50ppm 00 = ±100ppm	not available	M = 250pcs Tape&Reel R = 1000pcs Tape&Reel B = Bulk

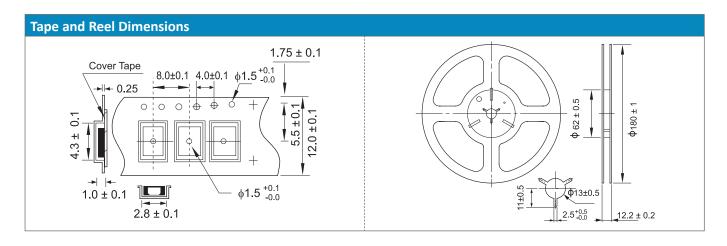

Marking Code Guide


Contains frequency, Quarztechnik manufacturing code, production code (month and year) and load capacitance.

Month Codes					
January	Α	July	G		
February	В	August	Н		
March	С	September	I		
April	D	October	J		
May	E	November	K		
June	F	December	L		

Year Codes					
2010	0	2011	1	2012	2
2013	3	2014	4	2015	5
2016	6	2017	7	2018	8
2019	9	2020	0	2021	1

Load Capacitance Code in pF						
pF	PN Code	pF	PN Code			
12	Α	20	F			
18	В	22	G			
8	С	30	Н			
10	D	32	I			
16	E	S	S			
	· · · · · · · · · · · · · · · · · · ·					

Example: First Line: 12.000 (Frequency) Second Line: QA4A (Quarztechnik - January - 2014 - 12 pF)

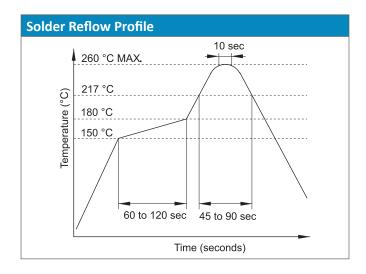

Environmental Specifications				
Mechanical Shock	MIL-STD-202, Method 213, C			
Vibration	MIL-STD-202, Method 201 & 204			
Thermal Cycle	MIL-STD, Method 1010, B			
Gross Leak	MIL-STD-202, Method 112			
Fine Leak	MIL-STD-202, Method 112			